



# Toshiba Satellite L455-S5046 RAM Replacement

This guide explains how to replace the RAM in Toshiba Satellite L455-S5046.

Written By: Daryl Spurgeon



## INTRODUCTION

This guide explains how to replace the RAM in Toshiba Satellite L455-S5046.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-




## Step 1 — RAM



- Remove the Phillips #0 7-mm screw from the back of the computer.

## Step 2

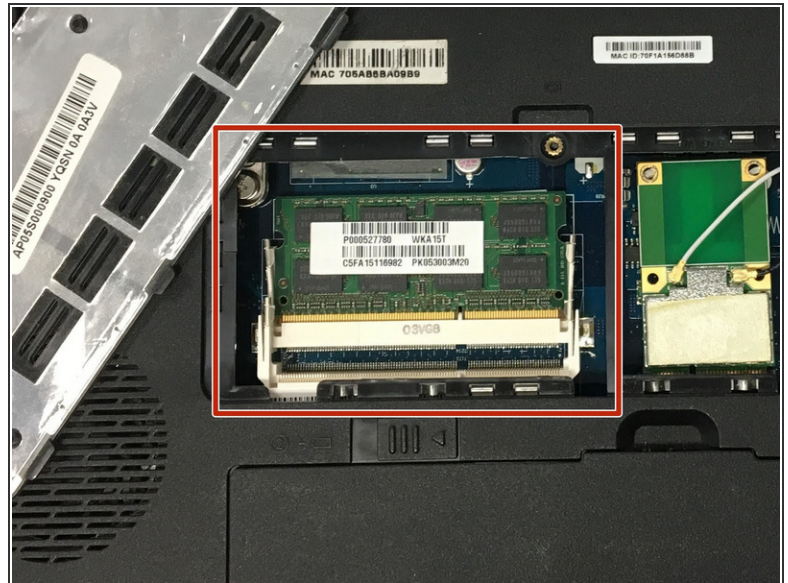

- Remove the plate to access the RAM stick.



- Unplug the existing RAM stick.
- Plug the new RAM stick into the open slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 05:38:19 AM.